 


VINCENT  
SHEPPARD



Remi collection

Product data sheet

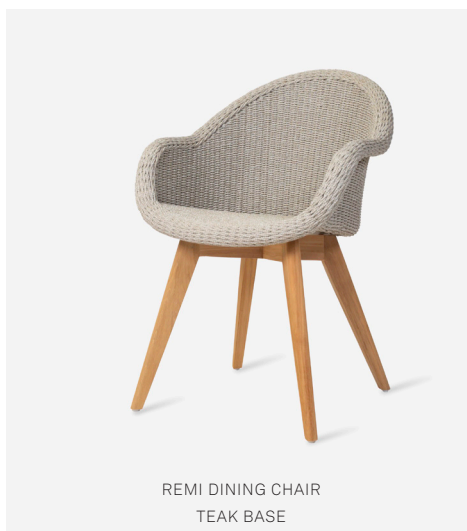

REMI DINING CHAIR  
TEAK BASE

## REMI

|                     |                         |
|---------------------|-------------------------|
| <b>frame</b>        | teak                    |
| <b>frame finish</b> | untreated teak          |
| <b>seat</b>         | polypropylene rope      |
| <b>seat colours</b> | fossil grey, dune white |
| <b>glides</b>       | white nylon             |

## CUSHION

|                  |                                     |                     |
|------------------|-------------------------------------|---------------------|
| <b>foam</b>      | dining chair                        | 2 cm polyether foam |
| <b>removable</b> | yes                                 |                     |
| <b>fabrics</b>   | see fabric data sheet for more info |                     |

## FRAME FINISH



UNTREATED  
TEAK

## SEAT COLOURS



FOSSIL GREY



DUNE WHITE

 
## PROTECTIVE COVERS

We recommend using protective covers only on **dry teak furniture**.

|                     |       |
|---------------------|-------|
| <b>dining chair</b> | PC064 |
|---------------------|-------|

## DIMENSIONS

### DINING CHAIR TEAK BASE

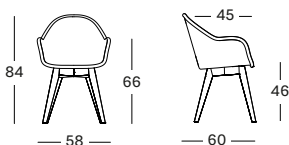

## VARIANTS

| DINING CHAIR | ITEM CODE      | FINISH      | PACKAGE DIMENSION (cm/inch) |                  | CBM (m³/ft³) | WEIGHT (kg/lb) |       |
|--------------|----------------|-------------|-----------------------------|------------------|--------------|----------------|-------|
| Teak base    | GD1830W002S033 | fossil grey | 61 x 90 x 65                | 24 x 35.5 x 25.6 | 0,36 12.7    | 12,5           | 27.56 |
|              | GD1830W002S045 | dune white  |                             |                  |              |                |       |

## MAINTENANCE AND CARE

---

### TEAK

#### Daily care

Use a moist towel or sponge with a mild solution of water and natural, non-aggressive soap.

#### Stubborn stains

If your furniture is stained, consider one of the following options:

- **Grease spots have appeared on the furniture**  
This is a natural feature of the wood and grease spots should gradually disappear after being exposed to sunlight. However, should you wish to remove these blemishes, we recommend using a degreasing agent and gentle scrubbing with a brush. Rinse off with clean water.
- **The furniture has developed mildew spots or black blemishes**  
This is usually the result of rainwater or sometimes sap dripping from the leaves of trees onto the wood leaving dark marks and spots. Ideally, we recommend the furniture is not placed under trees. However, these marks can be removed by lightly sanding with fine sandpaper.
- **You spilled wine or something else leaving persistent stains**  
For wine and other stains, we recommend using a weak solution of bleach and water combined with a dishwashing agent to wipe the area clean.